 


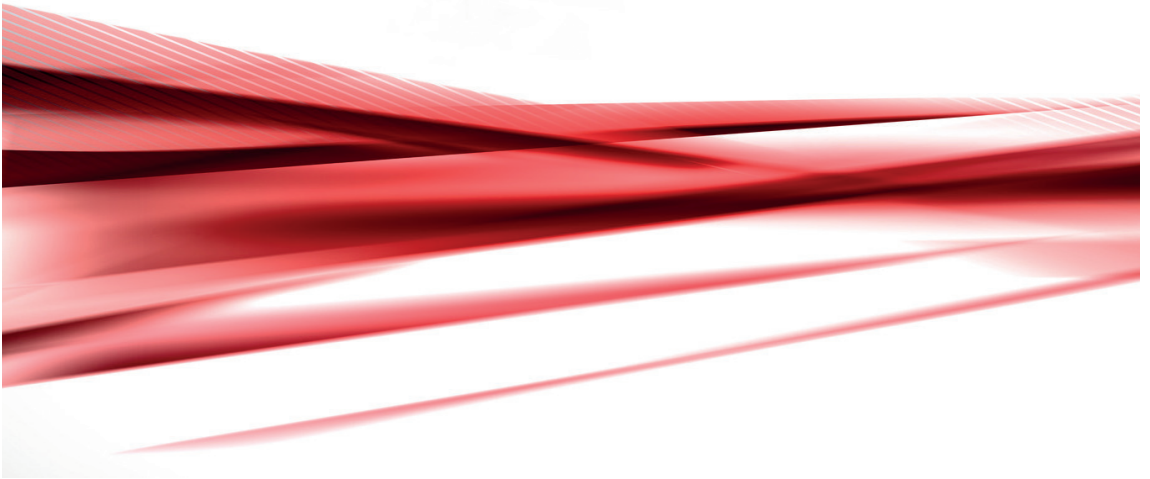

**Z-E2026**



**DEVICE QUICK START GUIDE**

**EN**

---

## CONTENTS

### OVERVIEW

ABOUT THIS MANUAL .....	P. 02
SAFETY INSTRUCTIONS.....	P. 02
BEFORE FIRST USE.....	P. 02

### DEVICE OVERVIEW

ZENEC SYSTEM .....	P. 03
MULTIFUNCTION STEERING WHEEL .....	P. 04

### BASIC OPERATION

TURN ON/OFF .....	P. 05
THEFT PROTECTION .....	P. 05
VOLUME CONTROL .....	P. 06
SOUND SETTINGS.....	P. 07 - 08
OE-SOUND SYSTEM.....	P. 09

### CAR

SETUP .....	P. 10
AIR CONDITIONING (AC INFO) .....	P. 11 - 12
OPTICAL PARKING SYSTEM (OPS) .....	P. 13

### GENERAL

NAVIGATION UPDATE.....	P. 14
TECHNICAL SPECIFICATIONS/APPROVAL NUMBER.....	P. 14

## OVERVIEW

### ABOUT THIS MANUAL

This manual describes how to operate the device, vehicle-specific facts, and the most important basic functions. In addition, the equipment variants and functions of the ZENEC system are described, as well as optional equipment of the vehicle manufacturer that may not be included as standard in your vehicle. This manual does not refer separately to such issues. Differences from this information, features or functions cannot be used for any claims.

### SAFETY INSTRUCTIONS

#### CAUTION

If the driver is distracted, this may cause an accident or injury. Operating the ZENEC system while driving can distract attention from the general traffic situation!

#### NOTE

The ZENEC system supports functions like multi-function steering wheel, display of air conditioning settings or optical parking system and multi-function display support. All of them are in dependence to the vehicle and can only be used, when they are provided by the vehicle.

### BEFORE FIRST USE

- ✓ Always follow all the safety instructions of the vehicle manufacturer, and the instructions given in this manual.
- ✓ Pay attention to the safety instructions of the ZENEC system.
- ✓ Activate free navigation updates for 1 year (more information at the end of this manual).

## DEVICE OVERVIEW

### ZENEC SYSTEM

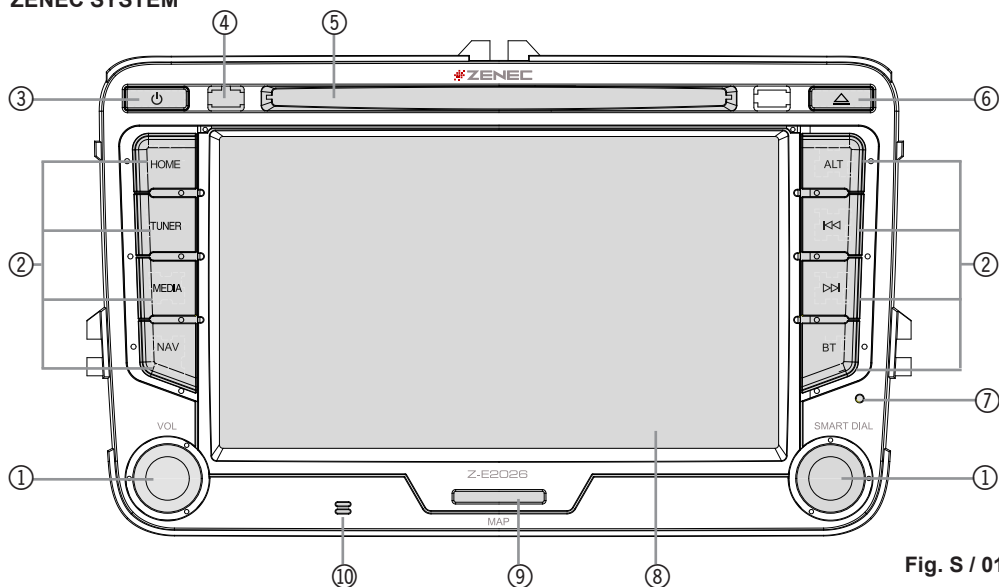 


Fig. S / 01

Item	Function	
①	Rotary knob - Press to mute audio. left - Rotate to adjust volume.	
	Rotary knob - Press to confirm a selection. right - Rotate to navigate through the list.	
②	HOME - Press to open Main Menu. - Hold to open Sound adjustment.	<a href="#">Device User Manual → Introduction → Main Sources</a>
	TUNER Select radio source	<a href="#">Device User Manual → Entertainment → Tuner</a>
	MEDIA Select media source	<a href="#">Device User Manual → Entertainment → Audio/Video</a>
	NAV Select navigation mode	<a href="#">Nav User Manual</a>
	ALT Select preassigned source	<a href="#">Device User Manual → Setup → Device Setup → Misc</a>
	<< Radio source - Press to choose the previous radio station. Media source - Press to choose the previous track/title.	
	>> Radio source - Press to choose the next radio station. Media source - Press to choose the next track/title.	
	BT Select Bluetooth mode	<a href="#">Device User Manual → Hands Free kit</a>
③	Turn on / off device	
④	IR receiver for remote control	
⑤	CD/DVD slot	
⑥	Press to eject a CD/DVD.	
⑦	Reset	
⑧	Touchscreen display	
⑨	SD slot, for navigation/Gracenote database use only.	
⑩	Internal microphone	

## MULTIFUNCTION STEERING WHEEL

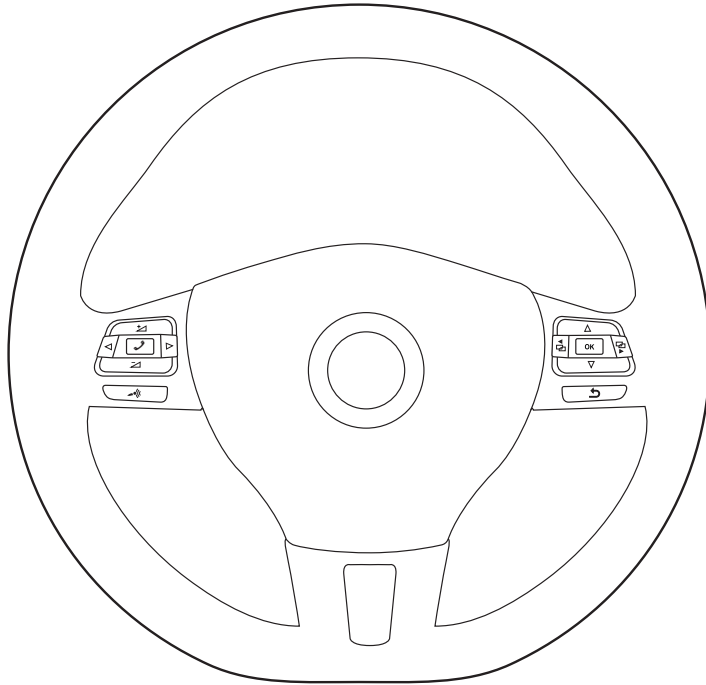 

 







Fig. S / 02

 
Item	Function
	Reduce volume
	Increase volume
	Mute
	Radio source      Press to choose the next radio station.
	Media source      Press to choose the next track/title. Press and hold to fast forward.
	Radio source      Press to choose the previous radio station.
	Media source      Press to choose the previous next track/title. Press and hold to fast rewind.
	Accept call
	Reject / End call

---

## BASIC OPERATION

### TURN ON / OFF

#### Manual On / Off



Press the button to turn the ZENEC system on, long press turn off (fig. S/01 ②).

#### Automatic On / Off

Vehicles with CAN bus interface:

Switching on the ignition will activate the ZENEC system. The boot process can take up to 1.5 minutes. This may result in some delay until the system is ready. The ZENEC system is shut down by switching off the ignition, or removing the ignition key.

#### NOTE

In the case of software updates by the vehicle manufacturer, communication failures and malfunctions between the vehicle and the ZENEC system may appear.

### ANTI-THEFT PROTECTION

The ZENEC system is equipped with an anti-theft protection function. If this is active, on restarting the ZENEC system after interruption of the power supply you will be asked to enter your password.

To change the password:

[Device User Manual](#) → [Setup](#) → [Device Setup](#) → [Help](#) → [Password](#)

#### NOTE



Keep your password safe. If the password is lost the ZENEC system must be uninstalled, and sent back in to ZENEC Service to release the anti-theft protection. There is a charge for this service!



 


---

## VOLUME CONTROL

### ZENEC System

Function	Button	Operation
Increase volume		Turn volume knob (fig. S/01 ②) clockwise.
Reduce volume		Turn volume knob (fig. S/01 ②) counterclockwise.
Mute		Short press the rotary knob on the left (fig. S/01 ②). Pressing the button again will cancel the muting.
Default settings		The default settings of the different sources can be set in Setup. <a href="#">Device User Manual</a> → <a href="#">Setup</a> → <a href="#">Audio</a>

### Multifunction steering wheel <sup>1)</sup>

Function	Button	Operation
Increase volume		Press button (fig. S/02) to increase volume.
Reduce volume		Press button (fig. S/02) to reduce volume.
Mute		Briefly press button (fig. S/02). Pressing the button again will cancel the muting.

#### NOTE

<sup>1)</sup> These functions can only be used when a multifunction steering wheel is installed in the vehicle.

## SOUND SETTINGS

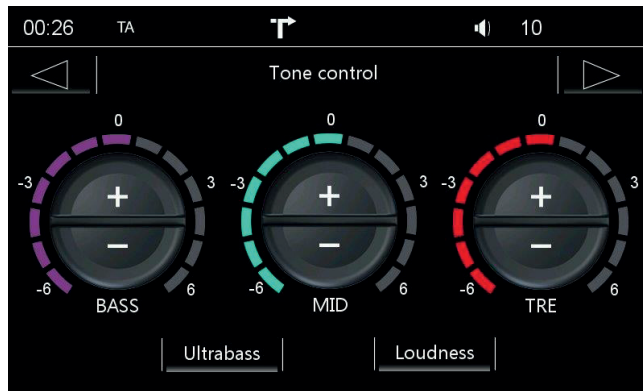 


Fig. S / 03

In this menu you can make the various sound settings. Tone control is available for each source separately.

Function	Icon	Operation
BASS		Touch to adjust the bass range from -6 to +6.
MID		Touch to adjust the mid range from -6 to +6.
TRE		Touch to adjust the treble range from -6 to +6.
Ultra bass		Touch to add extra amplification to the bass output.
Loudness		Touch to add extra amplification to the low and high output.

---

## BALANCE/FADER

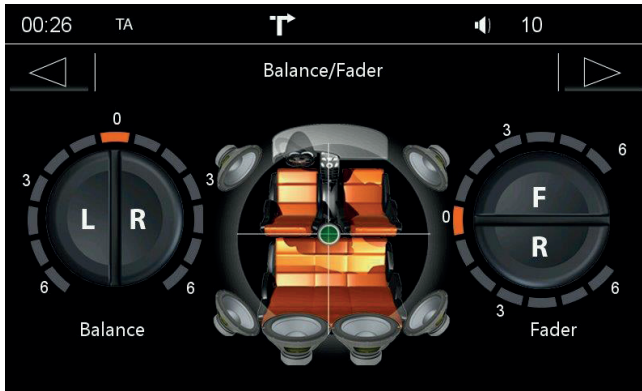 





Fig. S / 04

In this menu you can balance the volume between the speakers.

Function	Icon	Operation
Left / Right		Touch to adjust speaker balance between left and right.
Front / Rear		Touch to adjust speaker balance between front and rear.
Crosshairs		Touch and slide to the desired position.

## OE-SOUND SYSTEM

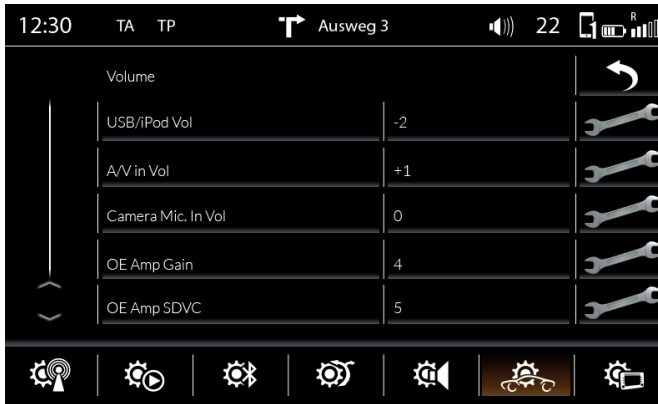 




Fig. S / 05

In this menu you can make the extended settings for the pre-installed OE amp.

Function	Icon	Operation
OE Amp SDVC		These settings can only be used when they are supported by the OE amp. 0 < > +7
OE Amp Gain		These settings can only be used when they are supported by the OE amp. 0 < > +30

## CAR

### SETUP

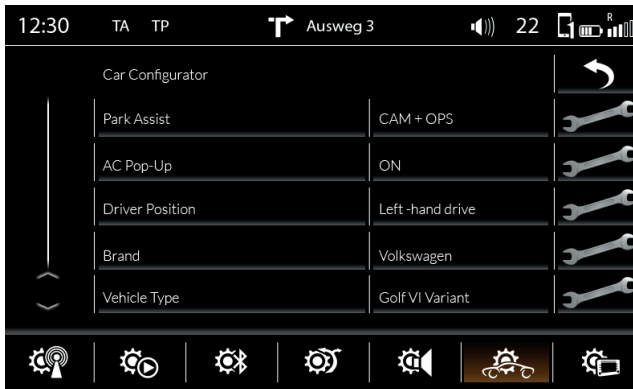 


Fig. S / 06

In this menu you can make all the settings specific to the car. You will find an explanation of the abbreviations at the end of the main manual.

Function	Icon	Operation
CAR Setup		Touch to get to this view. <a href="#">Device User Manual</a> → <a href="#">Setup</a> → <a href="#">CAR Setup</a>

Function	Icon	Operation
Park Drive Assist		Touch to set the parking aid display source. OFF / CAM / OPS / OPS & CAM
Reverse Audio Assist		Touch to set the muting function when parking aid is active. OFF / Reduced Volume / CAM Audio / MUTE Audio
Brand		Touch to choose the vehicle manufacturer.
Vehicle Type		Touch to choose the corresponding vehicle for the OPS and AC Info indication.
AC Info		Off = Air conditioning pop-up window does not appear during adjusting On = Air conditioning pop-up window does appear during adjusting
Driver Position		Left-hand drive / Right-hand drive

#### NOTE

These functions are only supported if supported by the vehicle.

## AIR CONDITIONING (AC INFO)





Fig. S / 07


 
If AC Info is enabled, changes due to the operation of the air conditioning will be displayed by the ZENEC system.

### OVERVIEW

Function	Icon	Operation
Ventilation	<b>ON</b>	On = Switch for ventilation is minimum adjusted to level 1 Off = Switch for ventilation is adjusted to level 0
Rear window heating		Rear window heating switched on or off
Windshield heating		Defrost function switched on or off
Air conditioning	<b>A/C</b>	Air conditioning switched on or off
Recirculating air operation		Recirculating air operation switched on or off
Dual	<b>DUAL</b>	Temperature settings for driver and passenger side in synchronously
Auto	<b>AUTO</b>	Automatic adjustment of temperature

Temperature arrows		Indication of current air flow: Frontwindow – Center – Leg room
Temperature		Blue ca. LOW – 20.0 C Yellow ca. 20.0 – 24.0 C Red ca. 24.0 – HIGH
Ventilator setting		The digit behind shows the adjusted setting.

### DYNAMIC INDICATION OF THE SEAT HEATER

Function	Icon	Operation
Seat heater		Indication of current seat heater setting.  In addition to the digit, the seat heater setting will be indicated in three different colour gradations.
Setting		The seat heater setting will be displayed in combination with a digit.

#### NOTE

All functions related to the air conditioning are only indicators. It's not possible to operate the air conditioning with the ZENEC system.

The effective range of functions is depending on the vehicle manufacturer, vehicle type and vehicle configuration. The ZENEC system supports all listed functions above. Differences from this information, features or functions cannot be used for claims.

## OPTICAL PARKING SYSTEM (OPS)

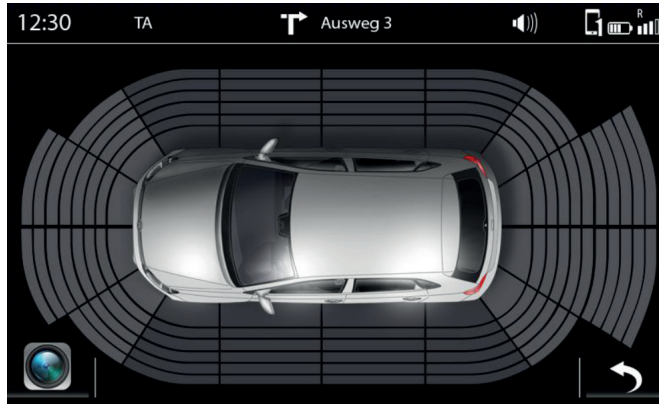 





Fig. S / 08

If your vehicle is equipped with a original factory installed optical parking system, you can use it with your ZENEC system.

### OVERVIEW

Function	Icon	Operation
Park Assist		OFF / CAM / OPS / OPS & CAM
OFF		The function is permanently turned off.
CAM		If there is a rear view camera connected, the camera picture will be displayed automatically.
OPS		Indicates the optical parking system depending on the vehicle configuration.
OPS & CAM		Indicates a combined picture of the rear view camera and the optical parking system.
Camera		Touch to show the camera picture.
Driver Position		Touch to leave this view.

#### NOTE

The effective range of functions is depending on the vehicle manufacturer, vehicle type and vehicle configuration. The ZENEC system supports all listed functions above. Differences from this information, features or functions cannot be used for claims.

---

## GENERAL

### NAVIGATION UPDATE

Activation of the free 12-month map software update period begins once the ZENEC system has been switched on and running over a distance of >10 km.

#### Requirements

1. PC or notebook with a Windows XP (Service Pack 2) operating system or higher, an SD card reader, together with broadband Internet access. Apple OS not supported.
2. An activated navigation map microSD card (set content)
3. Latest Naviextras Toolbox software, installed on your computer.  
Download-Link: <https://zenec.naviextras.com/shop/portal/downloads>

To be able to update your ZENEC device with new maps, proceed as follows:

1. Go to <https://zenec.naviextras.com/shop/portal> and set up a user account with a password and the personal data for your navigation device.
2. Download the Toolbox Software: Naviextras Toolbox Download. Read through the application instructions before taking any further steps. The Toolbox is periodically updated. Therefore, should you want to make a map update at a later time, always download the latest Toolbox version. This will guarantee optimal compatibility of all data transfer functions.

### TECHNICAL SPECIFICATIONS/APPROVAL NUMBER

This is a vehicle-specific multimedia system with DVD drive, hands-free system, navigation and radio. This ZENEC system is designed for a 12 V DC vehicle electrical system. Detailed information can be obtained from the ZENEC homepage:

[www.zenec.com](http://www.zenec.com)



If at any time in the future you should need to dispose this product, please note that waste electrical products are not be disposed with the household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice (Waste Electrical and Electronic Equipment Directive).

**E9** 10R-05 1776



---

Manufacturer: ACR Braendli + Voegeli AG · Bohrturmweg 1 · CH-5330 Bad Zurzach / Switzerland  
EU Legal Representative: ACR S & V GmbH · Industriestr. 35 · D-79787 Lauchringen / Germany

---

---

